

SNAIGÉ

ХЛАДИЛНИК

MB 41SM-TT000EH

Инструкция за употреба

В интерес на вашата безопасност и за да осигурите правилната употреба, преди да инсталирате и първо използвате уреда, прочетете внимателно това ръководство за употреба, включително неговите съвети и предупреждения. За да избегнете ненужни грешки и инциденти, е важно да се уверите, че всички хора, които използват уреда са добре запознати с неговата работа и характеристиките за безопасност. Запазете тези инструкции и се уверете, че те остават с уреда, ако бъде преместен или продаден, така че всеки, който го използва през целия си живот, да бъде правилно информиран за използването и безопасността на уреда.

За безопасността на живота и имуществото спазвайте предпазните мерки от тези инструкции, тъй като производителят не носи отговорност за щети, причинени от пропуск.

Безопасност на децата и уязвимите хора

- Този уред може да се използва от деца на възраст над 8 години и лица с намалени физически, сензорни или умствени способности или липса на опит и знания, ако са получили супервизия или инструкции относно използването на уреда в
- безопасен начин и разберете опасностите. Деца на възраст от 3 до 8 години имат право да зареждат и разтоварват този уред.
- Децата трябва да бъдат под наблюдение, за да не си играят с уреда.
- Почистването и поддръжката на потребителите не трябва да се извършват от деца, освен ако не са на възраст над 8 години и са под наблюдение.
- Пазете всички опаковки далеч от деца. Има риск от задушаване.
- Ако изхвърляте уреда, издърпайте щепсела от контакта, изрежете свързващия кабел (възможно най-близо до уреда) и извадете вратата, за да предотвратите играещи деца да не получат токов удар или да се затворят в него.

- Ако този уред разполага с магнитни уплътнения на вратата
- е да замените по-стар уред с пружинно заключване (резето сн на вратата или капака, уверете се, че тази пружина липсва, преди да изхвърлите стария уред. Това ще предотврати превръщането му в смъртен капан за дете.

Обща безопасност

 **ВНИМАНИЕ!** Пазете отворите за вентилация, в кутията на уреда или във вградената конструкция, без препятствия.

 **ВНИМАНИЕ!** Не използвайте механични устройства, Или други средства за ускоряване на размразяването процес, различен от препоръчания от производителя.

 **ВНИМАНИЕ!** Не повреждайте веригата на хладилния агент.

 **ВНИМАНИЕ!** Не използвайте други електрически уреди (като машини за сладолед) вътре в хладилни уреди, освен ако те не са одобрени за тази цел от производителя.

 **ВНИМАНИЕ!** Не докосвайте крушката, ако има е бил включен за дълъг период от време, защото може да е много горещо.¹⁾

1) Ако в отделението има светлина.

 **ВНИМАНИЕ!** Когато позиционирате уреда, уверете се, че захранващият кабел не е захванат или повреден.

 **ВНИМАНИЕ!** Не намирайте множество преносими контакти или преносими захранващи устройства в задната част на уреда.

- Не съхранявайте в този уред взривни вещества като аерозолни кутии със запалимо гориво. Хладилният изобутан (R-600a) се съдържа в хладилната верига на уреда, природен газ с високо ниво на екологична съвместимост, който въпреки това е запалим.
- По време на транспортирането и монтажа на уреда бъдете сигурни, че нито един от компонентите на хладилния контур не се повреди.
 - избягвайте открит пламък и източници на запалване;
 - проветрявайте старателно помещението, в което се намира уредът.
- Опасно е да променят спецификациите или да модифицират този продукт по някакъв начин. Всяка повреда на кабела може да причини късо съединение, пожар и / или токов удар.
- Този уред е предназначен за използване в домакинството и подобни приложения като:
 - кухненски площи за персонала в магазини, офиси и други работни среди;
 - фермерски къщи и от клиенти в хотели, мотели и други среди от жилищен тип;
 - условия за нощувка със закуска;
 - кетъринг и подобни приложения за продажба на дребно.

 **ВНИМАНИЕ!** Всички електрически компоненти (щепсел, захранващ кабел, компресор и др.) Трябва да бъдат заменени от сертифициран сервизен агент или квалифициран сервизен персонал.

 **ВНИМАНИЕ!** Електрическата крушка, доставена с този уред, е "крушка за специална употреба", използваема само с доставения уред. Тази „лампа за специална употреба“ не е използваема за битово осветление.

- Захранващият кабел не трябва да се удължава.
- Уверете се, че щепселът на захранването не е смачкан или повреден от гърба на уреда. Смачкан или повреден щепсел може да прегрее и да причини пожар.
- Уверете се, че можете да стигнете до щепсела на уреда.
- Не дърпайте захранващия кабел.
- Ако контактът на захранващия щепсел е разхлабен, не поставяйте щепсела. Има риск от токов удар или пожар.
- Не трябва да работите с уреда без лампата.
- Този уред е тежък. Трябва да се внимава при преместването му.
- Не отстранявайте и не докосвайте предмети от отделението на фризера, ако ръцете ви са влажни / мокри, тъй като това може да причини ожулвания на кожата или измръзване от замръзване / замразяване.
- Избягвайте продължително излагане на уреда на пряка слънчева светлина.

Ежедневна употреба

- Не поставяйте горещо върху пластмасовите части в уреда.
- Не поставяйте хранителни продукти директно към задната стена.

1) Ако в отделението има светлина.

- Замразените храни не трябва да се замразяват отново, след като са размразени.¹⁾
- Съхранявайте предварително опаковани замразени храни в съответствие с инструкциите за производство на замразени храни.¹⁾ Уреди, произвеждащи тораж
- препоръките трябва да се спазват стриктно.
- Обърнете се към съответните инструкции.
- Не поставяйте газирани газирани напитки във фризерното отделение, тъй като това създава натиск върху контейнера, което може да доведе до експлозия, което да доведе до повреда на уреда.
- Ледените близалки могат да причинят измръзване, ако се консумират направо от уреда.¹⁾
- За да избегнете замърсяване на храните, моля, спазвайте следните инструкции
- Отварянето на вратата за дълги периоди може да доведе до значително повишаване на температурата в отделенията на уреда.
- Почиствайте редовно повърхности, които могат да влязат в контакт с храна и достъпни дренажни системи.
- Почистете резервоарите за вода, ако не са били използвани
- 48 часа; промийте водната система, свързана с вода
- захранване, ако водата не е изтеглена в продължение на 5 дни.
- Съхранявайте суровото месо и риба в подходящи съдове в хладилника, така че да не влиза в контакт с друга храна или да капе върху нея.
- Две звездни отделения за замразени храни (ако са представени в уреда) са подходящи за съхранение на предварително замразени храни, съхранение или приготвяне на сладолед и приготвяне на кубчета лед.

1) Ако има отделение за фризер.

- Отделенията с една, две и три звезди (ако са представени в уреда) не са подходящи за замразяване на прясна храна.
- Ако уредът остане празен за дълги периоди, изключете, размразете, почистете, изсушете и оставете вратата отворена, за да предотвратите появата на монтиране в уреда.
- Грижи и почистване
- Преди поддръжка изключете уреда и изключете щепсела от контакта.
- Не почиствайте уреда с метални предмети.
- Не използвайте остри предмети за премахване на замръзване от
- Използвайте пластмасов скрепер.¹⁾
- Редовно проверявайте канализацията в хладилника за наличие на размразена вода. Ако е необходимо, почистете канализацията. Ако канализацията е блокирана, водата ще се събира в дъното на уреда.²⁾

Инсталация.

Важно! За електрическо свързване внимателно следвайте инструкциите, дадени в конкретни параграфи.

- Разопакувайте уреда и проверете дали има повреди по него. Не свързвайте уреда, ако е повреден. Съобщете за възможни повреди незабавно на мястото, където сте го купили. В този случай запазете опаковката.

1) Ако има отделение за фризер.

2) Ако има отделение за съхранение на прясна храна.

- Препоръчително е да изчакате поне четири часа, преди да свържете уреда, за да може маслото да изтече обратно в компресора.
- Около уреда трябва да има адекватна циркулация на въздуха, ако това не води до прегряване. За да постигнете достатъчна вентилация, следвайте инструкциите, свързани с монтажа.
- Където е възможно дистанционните елементи на продукта трябва да са до стена, за да се избегне докосване или улавяне на топли части (компресор, кондензатор), за да се предотврати евентуално изгаряне.
- Уредът не трябва да се намира близо до радиатори или готварски печки.
- Уверете се, че щепселът е достъпен след инсталирането на уреда.

Обслужване

- Всяка електрическа работа, необходима за обслужване на уреда, трябва да се извършва от квалифициран електротехник или компетентно лице.
- Този продукт трябва да се обслужва от оторизиран сервизен център и трябва да се използват само оригинални резервни части.

Пестене на енергия

- Не поставяйте гореща храна в уреда;
- Не опаковайте храната близо една до друга, тъй като това предотвратява въздуха Циркулиращи;
- Уверете се, че храната не докосва задната част на отделението (ята);
- Ако токът спре, не отваряйте вратите;
- Не отваряйте често вратите (вратите);
- Не дръжте вратата (ите) отворени твърде дълго време;
- Не настройвайте термостата на превишаване на ниските температури;

- Всички аксесоари, като чекмеджета, рафтове балкони, трябва да се държат там за по-ниска консумация на енергия.

Защита на околната среда

 Този уред не съдържа газове, които биха могли да увредят озоновия слой, нито в неговия хладилен кръг, нито в изолационни материали. Уредът не трябва да се изхвърля заедно с градските отпадъци и боклук. Изолационната пяна съдържа запалими газове: уредът трябва да бъде изхвърлен в съответствие с разпоредбите на уреда, за да се получи от местните власти. Избягвайте да повредите охлаждащия блок, особено топлообменника.

Материалите, използвани на този уред, маркирани със символа, могат да се рециклират.

Символът върху продукта или върху опаковката му показва, че този продукт не може да се третира като битов отпадък. Вместо това трябва да се отнесе до подходящия пункт за събиране за рециклиране на електрическо и електронно оборудване.

Като се уверите, че този продукт се изхвърля правилно, ще помогнете за предотвратяване на потенциални негативни последици за околната среда и човешкото здраве. 



Символът върху продукта или върху опаковката му показва, че този продукт не може да се третира като битов отпадък. Вместо това трябва да се отнесе до подходящия пункт за събиране за рециклиране на електрическо и електронно оборудване.

Като се уверите, че този продукт се изхвърля правилно, ще помогнете за предотвратяване на потенциални негативни последици за околната среда и човешкото здраве, които иначе биха могли да бъдат причинени от неподходящо боравене с този продукт. За по-подробна информация относно рециклирането на този продукт, моля, свържете се с местния съвет,

службата за битови отпадъци или магазина, от който сте закупили продукта.

Опаковъчни материали

Материалите със символа могат да се рециклират. Изхвърлете опаковката в подходящ контейнер за събиране, за да я рециклирате.

Изхвърляне на уреда

1. Изключете щепсела от контакта.
2. Изрежете хранващия кабел и го изхвърлете.




ВНИМАНИЕ! По време на употреба, сервиз и изхвърляне на уреда, моля, обърнете внимание символ, подобен на лявата страна, който е разположен отзад на уреда (задан панел или компресор) и е с жълт или оранжев цвят. Символът за предупреждение за пожар е. В тръбите за хладилен агент и компресора има запалими материали.

Моля, бъдете далеч от източника на пожар по време на използване, обслужване и изхвърляне.

1. Название на частите

ЧАСТИ И ФУНКЦИИ

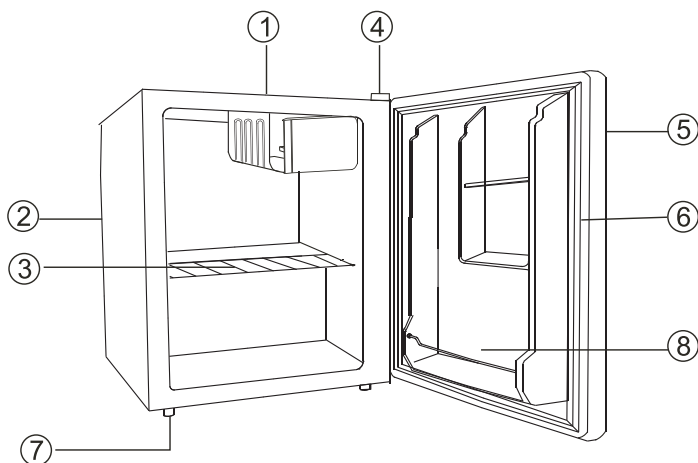

1. Корпус

2. Термостат

3. Лавица

4. Панта

5. Врата

6. Уплътнение


7. Регулируеми крака

8. Малка врата

ПРАВИЛНО ПОЗИЦИОНИРАНЕ


Вентилация

Има нужда от добра вентилация около хладилника за лесно разпръскване на топлината, висока ефективност на охлаждането и ниска консумация на енергия. За тази цел трябва да се осигури достатъчно свободно място около хладилника. Отзад и встрани трябва да има поне 10 см, а над хладилника 20см свободно пространство. Нужно е да се остави място хладилникът да се отваря на 160°.

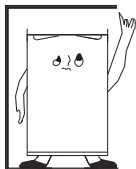


ЗАХРАНВАНЕ

Хладилникът има монофазно електрическо захранване с напрежение от 220-240 волта/50Hz. Ако напрежението се променя значително извън тези граници, е добре да свържете хладилника с автоматичен регулатор на мощността. Хладилникът трябва да се включва към отделен контакт за да се избегна заграване от други включени уреди. Контактът трябва да има заземяване.

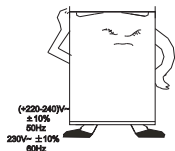

ЗАХРАНВАЩ КАБЕЛ

Кабелът не трябва да бъде опънат или навит на руло по време на работа. Забранено е кабелът да е близо до компресора, температурата на който е висока по време на работа. Допирът до компресора може да наруши изолацията и да причини електрически теч.

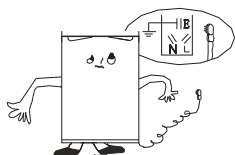

Защита от влага

Избягвайте поставянето на хладилника на място където е възможно да има голяма влажност за да намалите възможността за ръждясване на металните части на хладилника. Да не се допуска пръскането на хладилника с вода. Възможно е късо съединение.




Защита от топлина

Хладилникът трябва да бъде далеч от източници на топлина и да не бъде излаган на директна слънчева светлина.




Неподвижно поставяне

Подът на който хладилникът ще бъде поставен трябва да бъде равен и твърд. Не трябва да бъде поставян върху мека повърхност. С помощта на крачетата нивелирайте хладилника. Не трябва да бъде поставян до предмети, които е възможно да вибрират.

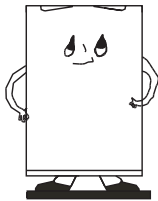

Избягване на опасности

Не се препоръчва да поставяте хладилника до летливи и избухливи газове и течности, като бензин, разтворители, спирт, лак, др. Тези вещества не могат да се съхраняват в хладилника.

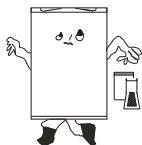

Преместване

При поставяне или преместване хладилникът не трябва да бъде наклоняван повече от 45°.

⚠ **ВНИМАНИЕ!** Когато монтирате уреда, уверете се, че захранващият кабел не е притиснат или повреден.

⚠ **ВНИМАНИЕ!** Не поставяйте разклонители или преносими захранващи устройства върху уреда.



ПРЕДПАЗНИ МЕРКИ

- Проверете дали напрежението в мрежата отговаря на това, посочено на етикета на уреда.
- Водата, съдържаща се в храната и във въздуха, влизащ в хладилника при отваряне, могат да предизвикат образуване на скреж. Това намалява ефективността на работа. Налага се да размразите ръчно скрежта, ако е дебела. При размразяване е необходимо да поставите тавичка под изпарителя за събиране на водата.
- Ако захранващият кабел е повреден, то той трябва да бъде заменен от упълномощен сервиз.
- Опасна е промяна на спецификациите или предназначението на хладилника.
- Ако хладилникът няма да се използва дълго време, изключете го от контакта.
- Изчакайте 5 минути преди да включите хладилника в случай на спиране на електрическия ток.
- **Този уред не е предназначен за използване от лица (включително деца) с ограничени физически, сетивни или умствени способности, или с недостатъчен опит и познания, освен ако те не са наблюдавани или инструктирани относно използването на уреда от лице, отговорно за тяхната безопасност.**

Обръщане на вратата



Има възможност вратата на хладилника да се отваря от ляво или дясно. Фабрично хладилникът се доставя с отваряне наляво. Ако искате да смените посоката на отваряне, следвайте указанията по-долу.

Забележка:

Преди да обърнете вратата, трябва да изключите захранването. Всички разглобени части трябва да бъдат запазени за монтирането на вратата.

При този хладилник пантите са поставени вдясно. Ако искате да смените посоката на отваряне, следвайте указанията по-долу.

1. Махнете капака на горната панта(6).
2. Махнете двата винта(1), които държат горната панта(5) от дясната страна. Извадете горната панта(5).
3. Поздигнете вратата и я поставете на мека повърхност за да не се издраска.
4. Развийте двата винта(8), които държат долната панта(2) и извадете долната панта.
5. Махнете левия преден крак (4) и го поставете вдясно.
6. Извадете планката от дясната страна.
7. Преди да поставите долната панта (2), извадете болта (9) и сменете посоката на долната панта (2). Инсталирайте долната панта(2) в лявата страна на долната планка с два винта(8).
8. Поставете болта (9) на долната панта(2).
9. Поставете вратата на мястото и, като се уверите, че вратата ляга на долната панта(2).
10. Като придържате вратата в затворена позиция, застопорете горната панта(5) в горната планка вляво с два винта(1). Не затягайте винтовете(1), докато не се уверите, че горната част на вратата не се е изравнила с горния плот на хладилника.
11. Поставете капака на горната панта (6) на пантата.

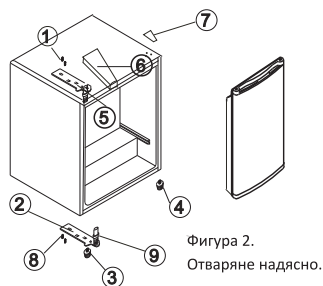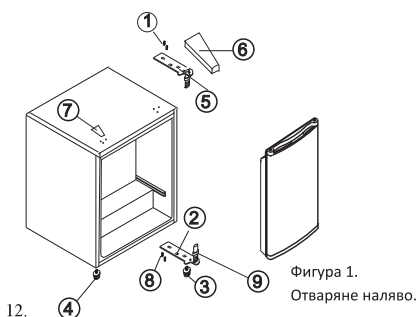

ПОДДРЪЖКА

- Хладилникът трябва да бъде почистван веднъж в месеца.
- При поддръжка се уверете, че храненето е изключено.
- Избършете вътрешността и външността, както и аксесоарите на хладилника с мокра кърпа. Ако са силно замърсени, използвайте неутрален почистващ препарат , и след това избършете с кърпа, напоена с вода.
- За почистване не използвайте гореща вода, разтворител, бензин, прах за пране, киселини и други. Забранено е хладилникът да се облива с вода. Това може да доведе до поява на ръжда или да предизвика късо съединение.
- Пазете гумените уплътнения. Те трябва да бъдат винаги чисти.
- Ако пластмасовите части са замърсени дълго време с мазнина, то те могат да се състарят и напукат бързо.

ВЪЗМОЖНИ ПРОБЛЕМИ

1. Когато хладилникът не работи :
 - Проверете дали има прекъсване на храненето
 - Проверете дали контактът е включен в щепсела.
 - Проверете дали няма изключил предпазител
2. Когато хладилникът охлажда прекалено силно:
 - Термостатът може да е поставен на по-висока мощност.
 - Ако поставите храна , съдържаща много влага, точно до охлаждащите повърхности, то тя може да замръзне. Това не е повреда.
3. Когато хладилникът не охлажда достатъчно:
 - Храните може да са поставени твърде плътно, като това пречи на достъпа на студен въздух.
 - Възможно е да е поставена топла храна или много храна едновременно.
 - Възможно е вратата да не е била затворена плътно.
 - Възможно е уплътненията да са повредени.
 - Възможно е да няма добра вентилация около хладилника.
 - Възможно е да няма достатъчно свободно пространство около хладилника.
 - Термостатът може да не е настроен правилно.
4. Образуване на воден конденз върху външността на хладилника.
 - Възможно е да се образува конденз ако влажността на въздуха е твърде висока. Това не е повреда. Избършете влагата със суха кърпа.
5. Шум от течаща вода:
 - Когато чуete шум като от течаща вода, това не е повреда. Шумът е от движението на охлаждащия газ.
6. Загриване на страничния панел :
 - Страничният панел на хладилника ще се затопли , когато вратата се отваря и затваря често, при включването на уреда и при високи външни температури през лятото. В такива случаи не докосвайте панела, затоплянето се дължи на отнемането на топлината от вътрешността на хладилника и не означава повреда.

Резервните части ще бъдат налични за период от 7 или до 10 години, в съответствие със специфичните изисквания на регламент 2019/2020.

**ENERG**

ТЪРГОВСКА МАРКА

ИДЕНТИФИКАТОР НА МОДЕЛ*

A

Информацията за модела, съхранявана в базата данни на продукта, може да бъде получена като сканирате QR кода от енергийния етикет на продукта, или като въведете следния уебсайт и потърсите идентификатора на вашия модел (*), намиращ се на енергийния етикет.
<https://eprel.ec.europa.eu>

Информация, относно минималния срок на гаранцията, предлагана от вносителя, както и контакти на сервизния център, е налична в гаранционната карта на уреда или онлайн на: <https://densi.bg/services>

SNAIGÉ

User Instruction

Larder

MB 41SM-TT000EH

Content	
1. Safety Information	Page 1~9
2. Overview	Page 10
3. Reverse Door	Page 11~12
4. Installation	Page 13~14
5. Daily Use	Page 15~19

In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety.

For the safety of life and property keep the precautions of these user's instructions as the manufacturer is not responsible for damages caused by omission.

Children and vulnerable people safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children aged from 3 to 8 years are allowed to load and unload this appliance.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.
- Keep all packaging well away from children. There is risk of suffocation.

- If you are discarding the appliance pull the plug out of the socket, cut the connection cable (as close to the appliance as you can) and remove the door to prevent playing children to suffer electric shock or to close themselves into it.
- If this appliance featuring magnetic door seals is to replace an older appliance having a spring lock (latch) on the door or lid, be sure to make that spring lock unusable before you discard the old appliance. This will prevent it from becoming a death trap for a child.

General safety

 **WARNING!** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

 **WARNING!** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

 **WARNING!** Do not damage the refrigerant circuit.

 **WARNING!** Do not use other electrical appliances (such as ice cream makers) inside of refrigerating appliances, unless they are approved for this purpose by the manufacture.

 **WARNING!** Do not touch the light bulb if it has been on for a long period of time because it could be very hot.¹⁾

¹⁾ If there is a light in the compartment.

 **WARNING!** When positioning the appliance, ensure the supply cord is not trapped or damaged.

 **WARNING!** Do not locate multiple portable socket-outlets or portable power suppliers at the rear of the appliance.

- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- The refrigerant isobutane (R-600a) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, which is nevertheless flammable.
- During transportation and installation of the appliance, be certain that none of the components of the refrigerant circuit become damaged.
 - avoid open flames and sources of ignition
 - thoroughly ventilate the room in which the appliance is situated
- It is dangerous to alter the specifications or modify this product in any way. Any damage to the cord may cause a short circuit, fire and/or electric shock.
- This appliance is intended to be used in household and similar applications such as
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses and by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - catering and similar non-retail applications.

 **WARNING!** Any electrical components (plug, power cord, compressor and etc.) must be replaced by a certified service agent or qualified service personnel.

 **WARNING!** The light bulb supplied with this appliance is a “special use lamp bulb” usable only with the appliance supplied. This “special use lamp” is not usable for domestic lighting.¹⁾

- Power cord must not be lengthened.
- Make sure that the power plug is not squashed or damaged by the back of the appliance. A squashed or damaged power plug may overheat and cause a fire.
- Make sure that you can come to the mains plug of the appliance.
- Do not pull the mains cable.
- If the power plug socket is loose, do not insert the power plug. There is a risk of electric shock or fire.
- You must not operate the appliance without the lamp.
- This appliance is heavy. Care should be taken when moving it.
- Do not remove nor touch items from the freezer compartment if you hands are damp/wet, as this could cause skin abrasions or frost/freezer burns.
- Avoid prolonged exposure of the appliance to direct sunlight.

Daily use

- Do not put hot on the plastic parts in the appliance.
- Do not place food products directly against the rear wall.

¹⁾ If there is a light in the compartment.

- Frozen food must not be re-frozen once it has been thawed out.¹⁾
- Store pre-packed frozen food in accordance with the frozen food manufacturer's instructions.¹⁾
- Appliance's manufacturer's storage recommendations should be strictly adhered to. Refer to relevant instructions.
- Do not place carbonated or fizzy drinks in the freezer compartment as it creates pressure on the container, which may cause it to explode, resulting in damage to the appliance.¹⁾
- Ice lollies can cause frost burns if consumed straight from the appliance.¹⁾
- To avoid contamination of food, please respect the following instructions
- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
- Clean water tanks if they have not been used for 48h; flush the water system connected to a water supply if water has not been drawn for 5 days.
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- Two-star frozen-food compartments (if they are presented in the appliance) are suitable for storing pre-frozen food, storing or making ice-cream and making ice cubes.

1) If there is a freezer compartment.

2) If there is a fresh-food storage compartment.

- One-, two- and three -star compartments (if they are presented in the appliance) are not suitable for the freezing of fresh food.
- If the appliance is left empty for long periods, switch off, defrost, clean, dry and leave the door open to prevent mould developing within the appliance.

Care and cleaning

- Before maintenance, switch off the appliance and disconnect the mains plug from the mains socket.
- Do not clean the appliance with metal objects.
- Do not use sharp objects to remove frost from the appliance. Use a plastic scraper.¹⁾
- Regularly examine the drain in the refrigerator for defrosted water. If necessary, clean the drain.
If the drain is blocked, water will collect in the bottom of the appliance.²⁾

Installation

Important! For electrical connection carefully follow the instructions given in specific paragraphs.

- Unpack the appliance and check if there are damages on it. Do not connect the appliance if it is damaged. Report possible damages immediately to the place you bought it. In that case retain packing.

1) If there is a freezer compartment.

2) If there is a fresh-food storage compartment.

- It is advisable to wait at least four hours before connecting the appliance to allow the oil to flow back in the compressor.
- Adequate air circulation should be around the appliance, lacking this leads to overheating. To achieve sufficient ventilation follow the instructions relevant to installation.
- Wherever possible the spacers of the product should be against a wall to avoid touching or catching warm parts (compressor, con-denser) to prevent possible burn.
- The appliance must not be located close to radiators or cookers.
- Make sure that the mains plug is accessible after the installation of the appliance.

Service

- Any electrical work required to do the servicing of the appliance should be carried out by a qualified electrician or competent person.
- This product must be serviced by an authorized Service Center, and only genuine spare parts must be used.

Energy saving

- Don't put hot food in the appliance;
- Don't pack food close together as this prevents air circulating;
- Make sure food don't touch the back of the compartment(s);

- If electricity goes off, don't open the door(s);
- Don't open the door(s) frequently;
- Don't keep the door(s) open for too long time;
- Don't set the thermostat on exceeding cold temperatures;
- All accessories, such as drawers, shelves balconies, should be kept there for lower energy consumption.

Environment Protection

 This appliance does not contain gasses which could damage the ozone layer, in either its refrigerant circuit or insulation materials. The appliance shall not be discarded together with the urban refuse and rubbish. The insulation foam contains flammable gases: the appliance shall be disposed according to the appliance regulations to obtain from your local authorities. Avoid damaging the cooling unit, especially the heat exchanger. The materials used on this appliance marked by the symbol  are recyclable.

 The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health,

which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

Packaging materials

The materials with the symbol are recyclable. Dispose the packaging in a suitable collection containers to recycle it.

Disposal of the appliance

1. Disconnect the mains plug from the mains socket.
2. Cut off the mains cable and discard it.





WARNING! During using, service and disposal the appliance, please pay attention to symbol similar as left side, which is located on rear of appliance (rear panel or compressor) and with yellow or orange color.

It's risk of fire warning symbol. There are flammable materials in refrigerant pipes and compressor.

Please be far away fire source during using, service and disposal.

Overview

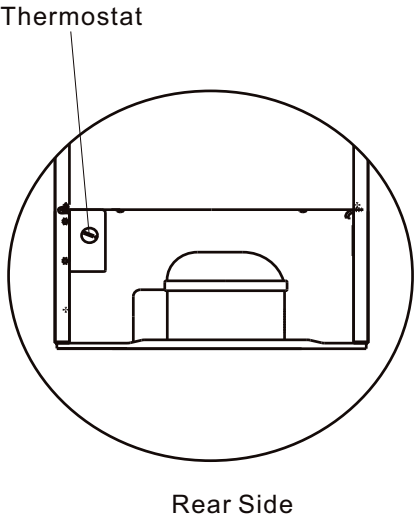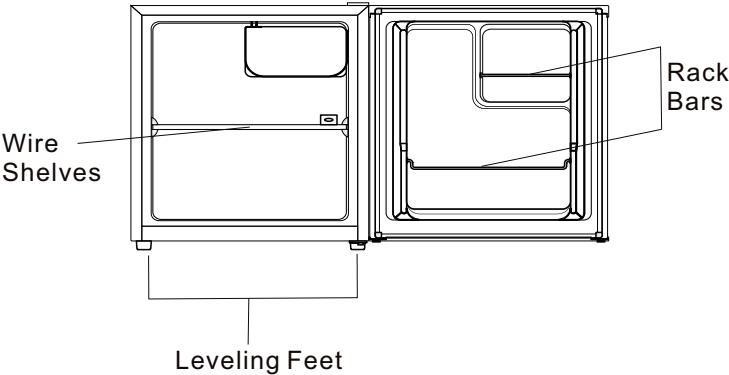


Note: Above picture is for reference only.

Reverse Door


Tool required: Philips screwdriver, Flat bladed screwdriver, Hexagonal spanner.

- Ensure the unit is unplugged and empty.
- To take the door off, it is necessary to tilt the unit backwards. You should rest the unit on something solid so that it will not slip during the door reversing process.
- All parts removed must be saved to do the reinstallation of the door.
- Do not lay the unit flat as this may damage the coolant system.
- It's better that 2 people handle the unit during assembly.


1. Remove the top right hinge cover.

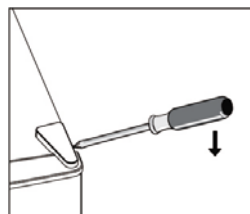


2. Undo the screws. Then remove the hinge bracket.

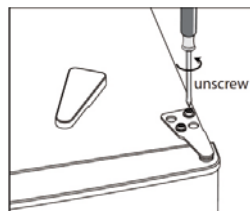

3. Remove the top left screw cover.


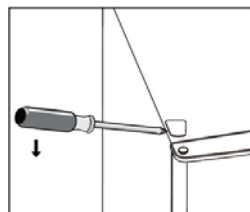


4. Move the core cover from left side to right side. And then lift the upper door and place it on a padded surface to prevent it from scratching.

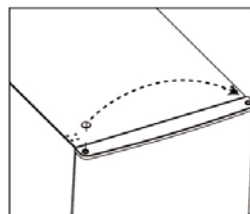


Reverse Door


5. Unscrew and remove the bottom hinge pin, turn the bracket over and replace it.

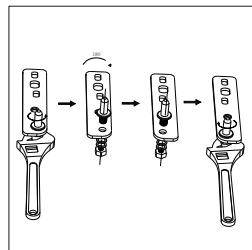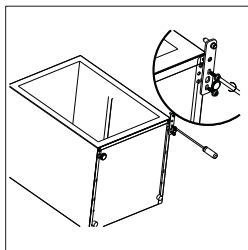


6. Refit the bracket fitting the bottom hinge pin. Replace both adjustable feet.

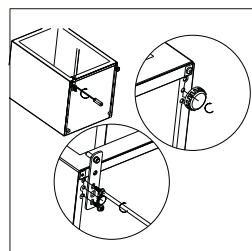


7. Place the door back on. Ensure the door is aligned horizontally and vertically so that the seals are closed on all sides before finally tightening the top hinge.
8. Insert the hinge bracket and screw it to the top of the unit.
9. Use a spanner to tighten it if necessary.

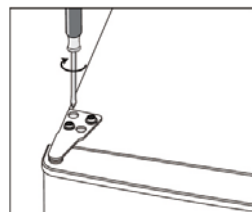

10. Put the hinge cover and the screw cover back.

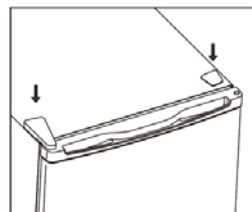


11. Detach the Fridge and the Freezer door gaskets and then attach them after rotating.

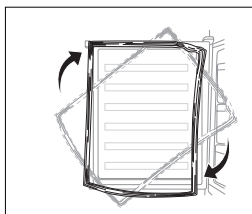



Installation

Install door handle

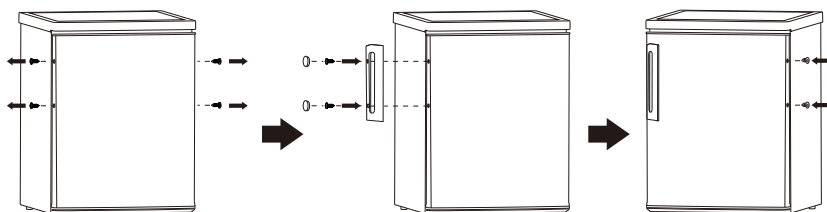

Space Requirement

- Keep enough space of door open.

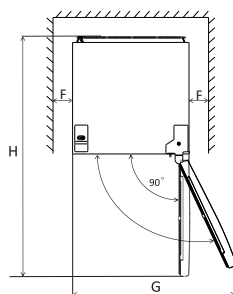
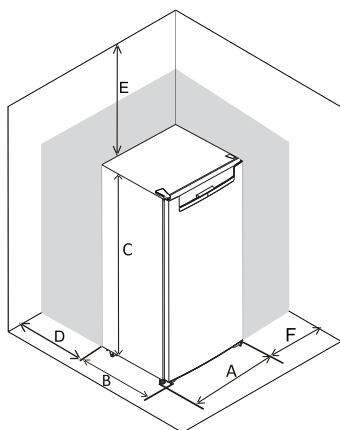


A	440
B	470
C	510
D	min=50
E	min=50
F	min=50
G	880
H	910

Levelling the unit

To do this adjust the two levelling feet at front of the unit.

If the unit is not level, the doors and magnetic seal alignments will not be covered properly.

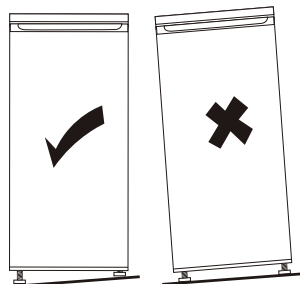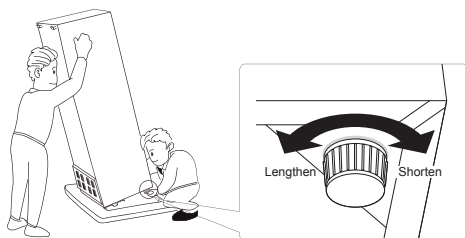

Installation

Positioning

Install this appliance at a location where the ambient temperature corresponds to the climate class indicated on the rating plate of the appliance:

for refrigerating appliances with climate class:

- extended temperature: this refrigerating appliance is intended to be used at ambient temperatures ranging from 10 °C to 32 °C; (SN)
- temperature: this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 32 °C; (N)
- subtropical: this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 38 °C; (ST)
- tropical: this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 43 °C; (T)

Location

The appliance should be installed well away from sources of heat such as radiators, boilers, direct sunlight etc. Ensure that air can circulate freely around the back of the cabinet. To ensure best performance, if the appliance is positioned below an overhanging wall unit, the minimum distance between the top of the cabinet and the wall unit must be at least 50 mm. Ideally, however, the appliance should not be positioned below overhanging wall units. Accurate leveling is ensured by one or more adjustable feet at the base of the cabinet. This refrigerating appliance is not intended to be used as a built-in appliance;



Warning! It must be possible to disconnect the appliance from the mains power supply; the plug must therefore be easily accessible after installation.

Electrical connection




Before plugging in, ensure that the voltage and frequency shown on the rating plate correspond to your domestic power supply. The appliance must be earthed. The power supply cable plug is provided with a contact for this purpose. If the domestic power supply socket is not earthed, connect the appliance to a separate earth in compliance with current regulations, consulting a qualified electrician.

The manufacturer declines all responsibility if the above safety precautions are not observed.

This appliance complies with the E.E.C. Directives.

Daily Use

Temperature setting recommendation

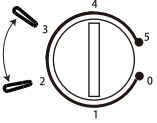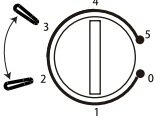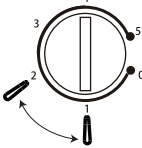Temperature Setting Recommendation		
Environment Temperature	Freezer compartment	Fridge compartment
Summer	/	
		Set on 2~3
Normal	/	
		Set on 2~3
Winter	/	
		Set on 1~2

- Information above give users recommendation of temperature setting.

Impact on Food Storage

- Under Recommended setting, the best storage time of fridge is no more than 3 days.
- The best storage time may reduce under other settings.

Daily Use

Daily use

Position different food in different compartments according to be below table

Refrigerator compartments	Type of food
Door or balconies of fridge compartment	• Foods with natural preservatives, such as jams,juices, drinks, condiments. • Do not store perishable foods.
Crisper drawer (salad drawer)	• Fruits, herbs and vegetables should be placed separately in the crisper bin. • Do not store bananas, onions, potatoes, garlic in the refrigerator.
Fridge shelf – middle	• Dairy products, eggs
Fridge shelf – top	• Foods that do not need cooking, such as ready-to-eat foods, deli meats, leftovers.

Daily Use

First use


Cleaning the interior

Before using the appliance for the first time, wash the interior and all internal accessories with lukewarm water and some neutral soap so as to remove the typical smell of a brand new product, then dry thoroughly.

Important! Do not use detergents or abrasive powders, as these will damage the finish.

Temperature Setting

- Plug on your appliance. The internal temperature is controlled by a thermostat. There are 6 (8) settings. 1 is warmest setting and 5 (7) is coldest setting and 0 is off.
- The appliance may not operate at the correct temperature if it is in a particularly hot or if you open the door often.

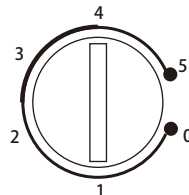

Daily use

Movable shelves

All shelves are able to be moved to suitable positions.

Positioning the door shelves

In order to storage food or beverage with different size, the door shelves can be placed at different height. Follow below process to adjust the shelves.

- Step 1. pull the shelf to be free.
- Step 2. Select suitable position and press the shelf to two convex plates until it is totally blocked.

Vegetable Drawer

The drawer is suitable for storing fruit and vegetables. It can be pull out freely.

Thawing

Deep-frozen or frozen food, prior to be used, can be thawed in a fridge compartment or at room temperature. Place the frozen food in a dish or bowl to avoid the flowing of condensate water when thaw it in compartment.

This refrigerating appliance is not suitable for freezing foodstuffs.

Helpful hints and tips

Hints for fresh food refrigeration

To obtain the best performance:

- do not store warm food or evaporating liquids in the refrigerator
- do cover or wrap the food, particularly if it has a strong flavor
- position food so that air can circulate freely around it

Hints for refrigeration

Useful hints:

- Meat (all types): wrap in polythene bags and place on the glass shelf above the vegetable drawer. For safety, store in this way only one or two days at the most.
- Cooked foods, cold dishes, etc...: these should be covered and may be placed on any shelf.
- Fruit and vegetables: these should be thoroughly cleaned and placed in the vegetable drawer.

Daily Use

- Butter and cheese: these should be placed in special airtight containers or wrapped in aluminium foil or polythene bags to exclude as much air as possible.
- Milk bottles: these should have a cap and should be stored in the bottle rack on the door. Bananas, potatoes, onions and garlic, if not packed, must not be kept in the refrigerator.

Cleaning

For hygienic reasons the appliance interior, including interior accessories, should be cleaned regularly.



Caution! The appliance may not be connected to the mains during cleaning. Danger of electrical shock! Before cleaning switch the appliance off and remove the plug from the mains, or switch off or turn out the circuit breaker or fuse. Never clean the appliance with a steam cleaner. Moisture could accumulate in electrical components, danger of electrical shock! Hot vapors can lead to the damage of plastic parts. The appliance must be dry before it is placed back into service.

Important! Ethereal oils and organic solvents can attack plastic parts, e.g. lemon juice or the juice from orange peel, butyric acid, cleanser that contain acetic acid.

- Do not allow such substances to come into contact the appliance parts.
- Do not use any abrasive cleaners
- Remove the food from the freezer. Store them in a cool place, well covered.
- Switch the appliance off and remove the plug from the mains, or switch off or turn out the circuit breaker of fuse.
- Clean the appliance and the interior accessories with a cloth and lukewarm water. After cleaning wipe with fresh water and rub dry.
- Accumulation of dust at the condenser increases energy consumption. For this reason carefully clean the condenser at the back of the appliance once a year with a soft brush or a vacuum cleaner.¹⁾
- After everything is dry place appliance back into service.

1) If the condenser is at back of appliance.

Daily Use

Troubleshooting



Caution! Before troubleshooting, disconnect the power supply. Only a qualified electrician or competent person must do the troubleshooting that is not in this manual.

Important! There are some sounds during normal use (compressor, refrigerant circulation).

Problem	Possible cause	Solution
Appliance does not work	Temperature regulation knob is set at number "0".	Set the knob at other number to switch on the appliance.
	Mains plug is not plugged in or is loose	Insert mains plug.
	Fuse has blown or is defective	Check fuse, replace if necessary.
	Socket is defective	Mains malfunctions are to be corrected by an electrician.
The food is too warm.	Temperature is not properly adjusted.	Please look in the initial Temperature Setting section.
	Door was open for an extended period.	Open the door only as long as necessary.
	A large quantity of warm food was placed in the appliance within the last 24 hours.	Turn the temperature regulation to a colder setting temporarily.
	The appliance is near a heat source.	Please look in the installation location section.
Appliance cools too much	Temperature is set too cold.	Turn the temperature regulation knob to a warmer setting temporarily.
Unusual noises	Appliance is not level.	Re-adjust the feet.
	The appliance is touching the wall or other objects.	Move the appliance slightly.
	A component, e.g. a pipe, on the rear of the appliance is touching another part of the appliance or the wall.	If necessary, carefully bend the component out of the way.

If the malfunction shows again, contact the Service Center.

These data are necessary to help you quickly and correctly. Write the necessary data here, refer to the rating plate.

Spare parts will be available for a period of 7 or up to 10 years, in accordance with the specific requirements of the 2019/2020 regulation.