

SNAIGÉ

УПЪТВАНЕ ЗА УПОТРЕБА НА MRF30FB -P5CB2EH Комбиниран хладилник с фризер

Съдържание

1. Инструкции за безопасност
2. Описание
3. Монтаж
4. Ежедневна употреба

В интерес на вашата безопасност и за да осигурите правилната употреба, преди да инсталирате и първо използвате уреда, прочетете внимателно това ръководство за употреба, включително неговите съвети и предупреждения. За да избегнете ненужни грешки и инциденти, е важно да се уверите, че всички хора, които използват уреда са добре запознати с неговата работа и характеристиките за безопасност. Запазете тези инструкции и се уверете, че те остават с уреда, ако бъде преместен или продаден, така че всеки, който го използва през целия си живот, да бъде правилно информиран за използването и безопасността на уреда.

За безопасността на живота и имуществото спазвайте предпазните мерки от тези инструкции, тъй като производителят не носи отговорност за щети, причинени от пропуск.

Безопасност на децата и уязвимите хора

- Този уред може да се използва от деца на възраст над 8 години и лица с намалени физически, сензорни или умствени способности или липса на опит и знания, ако са получили супервизия или инструкции относно използването на уреда в
- безопасен начин и разберете опасностите. Деца на възраст от 3 до 8 години имат право да зареждат и разтоварват този уред.
- Децата трябва да бъдат под наблюдение, за да не си играят с уреда.
- Почистването и поддръжката на потребителите не трябва да се извършват от деца, освен ако не са на възраст над 8 години и са под наблюдение.
- Пазете всички опаковки далеч от деца. Има риск от задушаване.
- Ако изхвърляте уреда, издърпайте щепсела от контакта, изрежете свързващия кабел (възможно най-близо до уреда) и извадете вратата, за да предотвратите играещи деца да не получат токов удар или да се затворят в него.

- Ако този уред разполага с магнитни уплътнения на вратата
- е да замените по-стар уред с пружинно заключване (резето *ch* на вратата или капака, уверете се, че тази пружина липсва, преди да изхвърлите стария уред. Това ще предотврати превръщането му в смъртен капан за дете.

Обща безопасност

 **ВНИМАНИЕ!** Пазете отворите за вентилация, в кутията на уреда или във вградената конструкция, без препятствия.

 **ВНИМАНИЕ!** Не използвайте механични устройства, Или други средства за ускоряване на размразяването процес, различен от препоръчания от производителя.

 **ВНИМАНИЕ!** Не повреждайте веригата на хладилния агент.

 **ВНИМАНИЕ!** Не използвайте други електрически уреди (като машини за сладолед) вътре в хладилни уреди, освен ако те не са одобрени за тази цел от производителя.

 **ВНИМАНИЕ!** Не докосвайте крушката, ако има е бил включен за дълъг период от време, защото може да е много горещо.¹⁾

1) Ако в отделението има светлина.

 **ВНИМАНИЕ!** Когато позиционирате уреда, уверете се, че захранващият кабел не е захванат или повреден.

 **ВНИМАНИЕ!** Не намирайте множество преносими контакти или преносими захранващи устройства в задната част на уреда.

- Не съхранявайте в този уред взривни вещества като аерозолни кутии със запалимо гориво. Хладилният изобутан (R-600a) се съдържа в хладилната верига на уреда, природен газ с високо ниво на екологична съвместимост, който въпреки това е запалим.
- По време на транспортирането и монтажа на уреда бъдете сигурни, че нито един от компонентите на хладилния контур не се повреди.
 - избягвайте открит пламък и източници на запалване;
 - проветрявайте старателно помещението, в което се намира уредът.
- Опасно е да променят спецификациите или да модифицират този продукт по някакъв начин. Всяка повреда на кабела може да причини късо съединение, пожар и / или токов удар.
- Този уред е предназначен за използване в домакинството и подобни приложения като:
 - кухненски площи за персонала в магазини, офиси и други работни среди;
 - фермерски къщи и от клиенти в хотели, мотели и други среди от жилищен тип;
 - условия за нощувка със закуска;
 - кетъринг и подобни приложения за продажба на дребно.

 **ВНИМАНИЕ!** Всички електрически компоненти (щепсел, захранващ кабел, компресор и др.) Трябва да бъдат заменени от сертифициран сервизен агент или квалифициран сервизен персонал.

 **ВНИМАНИЕ!** Електрическата крушка, доставена с този уред, е "крушка за специална употреба", използваема само с доставения уред. Тази „лампа за специална употреба“ не е използваема за битово осветление.

- Захранващият кабел не трябва да се удължава.
- Уверете се, че щепселът на захранването не е смачкан или повреден от гърба на уреда. Смачкан или повреден щепсел може да прегрее и да причини пожар.
- Уверете се, че можете да стигнете до щепсела на уреда.
- Не дърпайте захранващия кабел.
- Ако контактът на захранващия щепсел е разхлабен, не поставяйте щепсела. Има риск от токов удар или пожар.
- Не трябва да работите с уреда без лампата.
- Този уред е тежък. Трябва да се внимава при преместването му.
- Не отстранявайте и не докосвайте предмети от отделението на фризера, ако ръцете ви са влажни / мокри, тъй като това може да причини ожулвания на кожата или измръзване от замръзване / замразяване.
- Избягвайте продължително излагане на уреда на пряка слънчева светлина.

Ежедневна употреба

- Не поставяйте горещо върху пластмасовите части в уреда.
- Не поставяйте хранителни продукти директно към задната стена.

1) Ако в отделението има светлина.

- Замразените храни не трябва да се замразяват отново, след като са размразени.¹⁾
- Съхранявайте предварително опаковани замразени храни в съответствие с инструкциите за производство на замразени храни.¹⁾ Уреди, произвеждащи тораж
- препоръките трябва да се спазват стриктно.
- Обърнете се към съответните инструкции.
- Не поставяйте газирани газирани напитки във фризерното отделение, тъй като това създава натиск върху контейнера, което може да доведе до експлозия, което да доведе до повреда на уреда.
- Ледените близалки могат да причинят измръзване, ако се консумират направо от уреда.¹⁾
- За да избегнете замърсяване на храните, моля, спазвайте следните инструкции
- Отварянето на вратата за дълги периоди може да доведе до значително повишаване на температурата в отделенията на уреда.
- Почиствайте редовно повърхности, които могат да влязат в контакт с храна и достъпни дренажни системи.
- Почистете резервоарите за вода, ако не са били използвани
- 48 часа; промийте водната система, свързана с вода
- хранване, ако водата не е изтеглена в продължение на 5 дни.
- Съхранявайте суровото месо и риба в подходящи съдове в хладилника, така че да не влиза в контакт с друга храна или да капе върху нея.
- Две звездни отделения за замразени храни (ако са представени в уреда) са подходящи за съхранение на предварително замразени храни, съхранение или приготвяне на сладолед и приготвяне на кубчета лед.

1) Ако има отделение за фризер.

- Отделенията с една, две и три звезди (ако са представени в уреда) не са подходящи за замразяване на прясна храна.
- Ако уредът остане празен за дълги периоди, изключете, размразете, почистете, изсушете и оставете вратата отворена, за да предотвратите появата на монтиране в уреда.
- Грижи и почистване
- Преди поддръжка изключете уреда и изключете щепсела от контакта.
- Не почиствайте уреда с метални предмети.
- Не използвайте остри предмети за премахване на замръзване от
- Използвайте пластмасов скрепер.¹⁾
- Редовно проверявайте канализацията в хладилника за наличие на размразена вода. Ако е необходимо, почистете канализацията. Ако канализацията е блокирана, водата ще се събира в дъното на уреда.²⁾

Инсталация.

Важно! За електрическо свързване внимателно следвайте инструкциите, дадени в конкретни параграфи.

- Разопакувайте уреда и проверете дали има повреди по него. Не свързвайте уреда, ако е повреден. Съобщете за възможни повреди незабавно на мястото, където сте го купили. В този случай запазете опаковката.

1) Ако има отделение за фризер.

2) Ако има отделение за съхранение на прясна храна.

- Препоръчително е да изчакате поне четири часа, преди да свържете уреда, за да може маслото да изтече обратно в компресора.
- Около уреда трябва да има адекватна циркулация на въздуха, ако това не води до прегряване. За да постигнете достатъчна вентилация, следвайте инструкциите, свързани с монтажа.
- Където е възможно дистанционните елементи на продукта трябва да са до стена, за да се избегне докосване или улавяне на топли части (компресор, кондензатор), за да се предотврати евентуално изгаряне.
- Уредът не трябва да се намира близо до радиатори или готварски печки.
- Уверете се, че щепселът е достъпен след инсталирането на уреда.

Обслужване

- Всяка електрическа работа, необходима за обслужване на уреда, трябва да се извършва от квалифициран електротехник или компетентно лице.
- Този продукт трябва да се обслужва от оторизиран сервизен център и трябва да се използват само оригинални резервни части.

Пестене на енергия

- Не поставяйте гореща храна в уреда;
- Не опаковайте храната близо една до друга, тъй като това предотвратява въздуха Циркулиращи;
- Уверете се, че храната не докосва задната част на отделението (ята);
- Ако токът спре, не отваряйте вратите;
- Не отваряйте често вратите (вратите);
- Не дръжте вратата (ите) отворени твърде дълго време;
- Не настройвайте термостата на превишаване на ниските температури;

- Всички аксесоари, като чекмеджета, рафтове балкони, трябва да се държат там за по-ниска консумация на енергия.

Защита на околната среда

 Този уред не съдържа газове, които биха могли да увредят озоновия слой, нито в неговия хладилен кръг, нито в изолационни материали. Уредът не трябва да се изхвърля заедно с градските отпадъци и боклук. Изолационната пяна съдържа запалими газове: уредът трябва да бъде изхвърлен в съответствие с разпоредбите на уреда, за да се получи от местните власти. Избягвайте да повредите охлаждащия блок, особено топлообменника.

Материалите, използвани на този уред, маркирани със символа, могат да се рециклират.

Символът върху продукта или върху опаковката му показва, че този продукт не може да се третира като битов отпадък. Вместо това трябва да се отнесе до подходящия пункт за събиране за рециклиране на електрическо и електронно оборудване.

Като се уверите, че този продукт се изхвърля правилно, ще помогнете за предотвратяване на потенциални негативни последици за околната среда и човешкото здраве. 



Символът върху продукта или върху опаковката му показва, че този продукт не може да се третира като битов отпадък. Вместо това трябва да се отнесе до подходящия пункт за събиране за рециклиране на електрическо и електронно оборудване.

Като се уверите, че този продукт се изхвърля правилно, ще помогнете за предотвратяване на потенциални негативни последици за околната среда и човешкото здраве, които иначе биха могли да бъдат причинени от неподходящо боравене с този продукт. За по-подробна информация относно рециклирането на този продукт, моля, свържете се с местния съвет,

службата за битови отпадъци или магазина, от който сте закупили продукта.

Опаковъчни материали

Материалите със символа могат да се рециклират. Изхвърлете опаковката в подходящ контейнер за събиране, за да я рециклирате.

Изхвърляне на уреда


1. Изключете щепсела от контакта.
2. Изрежете захранващия кабел и го изхвърлете.



ВНИМАНИЕ! По време на употреба, сервиз и изхвърляне на уреда, моля, обърнете внимание символ, подобен на лявата страна, който е разположен отзад на уреда (задан панел или компресор) и е с жълт или оранжев цвят. Символът за предупреждение за пожар е. В тръбите за хладилен агент и компресора има запалими материали.

Моля, бъдете далеч от източника на пожар по време на използване, обслужване и изхвърляне.


Преглед

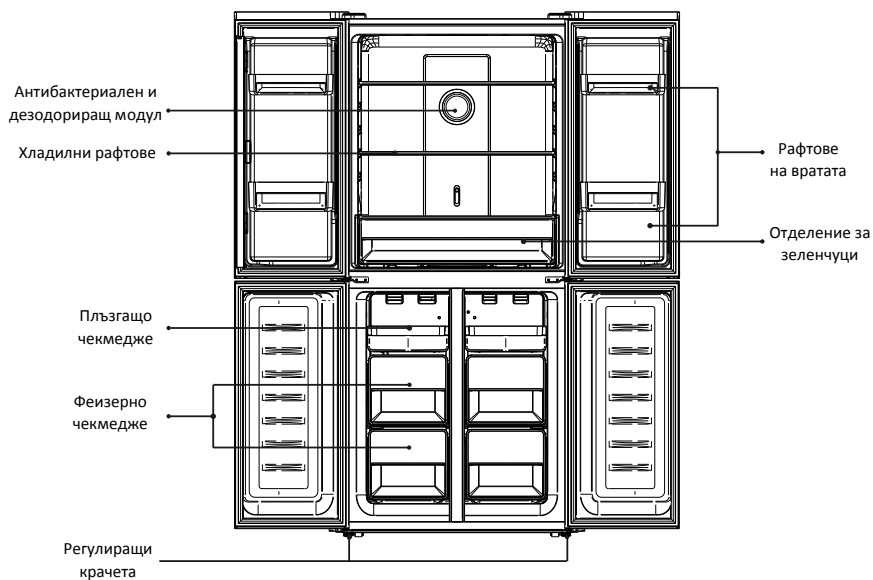

Забележка: Горната снимка е само за справка. Реалният уред вероятно е различен

Ежедневна употреба

Използване на контролния панел

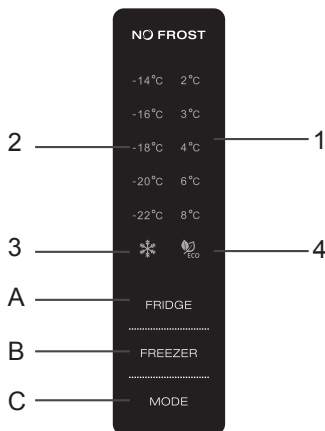

1.1 ФУНКЦИИ НА БУТОНИТЕ

- A. Контрол на температурата на хладилното отделение
- B. Контрол на температурата на фризерното отделение
- C. Режим

1.2 LED ДИСПЛЕЙ

- 1. Температура на хладилното отделение
- 2. Температура на фризерното отделение
- 3. Супер режим
- 4. ECO режим

2.0 УСЛОВИЕ НА ОПЕРАЦИЯ

Контролният панел ще свети 100% за 3 секунди след включване на хранването и след това ще покаже предишна настройка на температурата или режима на работа, преди да изключите хранването. След това можете да регулирате температурата на фризера или хладилното отделение или режима на работа.

2.1 ДИСПЛЕЙ

- 2.1.1 Панелът ще свети за 2 минути, след като се отвори вратата на хладилното отделение.
- 2.1.2 Панелът ще свети при всяко действие на бутона, докато светлината ще изгасне 2 минути след последната операция.
- 2.1.3 Показване по време на нормална работа
 - Температурен дисплей на хладилното отделение: Показва температурата на текущата настройка.
 - Температурен дисплей на фризерното отделение: Показва температурата на текущата настройка.

Ежедневна употреба

3.0 БУТОНИ

3.1 ХЛАДИЛНИК

C, 3 ° C, 4 ° C, 6 ° C, 8 ° C, изборът ще бъде потвърден след 5 секунди светкавица на иконите за температура на хладилника. В режим ECO този бутон не реагира.

3.2 ФРИЗЕР

Натиснете бутона FREEZER, за да регулирате температурата на фризерното отделение в потребителски режим.

Докоснете последователно бутона, температурата ще се промени в кръг от „-14 ° C, -16 ° C, -18 ° C, -20 ° C, -22 ° C, изборът ще бъде потвърден след 5 секунди светкавица от икони за температура на фризера. В режимите ECO и SUPER този бутон не реагира.

3.3 РЕЖИМ

Натиснете бутона MODE, за да изберете режим на работа: ECO, SUPER и потребителски режим.

След като изберете ECO режим, иконата ECO ще свети и други икони ще бъдат изключени.

След като изберете режим SUPER, иконата за SUPER и иконата за температура на хладилника ще светят, други икони ще бъдат изключени.

След като изберете потребителски режим, можете да регулирате температурата на отделения за хладилник и фризер, като натиснете бутона FRIDGE и FREEZER.

4.0 ЕКО РЕЖИМ

Натиснете бутона MODE, за да изберете ECO режим, ECO иконата ще мига 5 секунди и след това ECO режимът е потвърден.

В режим ECO уредът автоматично настройва температурата на отделенията за фризер и хладилник според температурата на околната среда.

Натиснете бутон MODE, за да изберете друг работен режим, за да излезете от ECO режим.

5.0 Супер режим

Натиснете бутона MODE, за да изберете Super mode. И това ще бъде потвърдено след 5 секунди светкавица на супер иконата.

В супер режим бутонът „FREEZER“ няма да отговори на нито едно натискане.

За да излезете от режим Super,

- Регулиране на режима чрез бутон MODE,

- Или след 50 часа Super режим, хладилникът автоматично ще го спре и ще влезе в предишна настройка.

Полезен съвет:

Ако планирате да замразите голям брой храни за един път, моля, настройте Super mode 24 часа напред.

Внимание:

В режим Super, хладилникът ще работи усилено. Така шумът от хладилника ще бъде малко по-висок от нормалното движение.

6.0 Аларма с отворена врата

Ако вратата на хладилника (горната) се държи отворена за 60 секунди, периодично ще се появява аларма, докато вратата се затвори.

Първа употреба

Почистване на интериора

Ежедневна употреба

Преди да използвате уреда за първи път, измийте интериора и всички вътрешни аксесоари с хладка вода и малко неутрален сапун, така че да премахнете типичния мирис на чисто нов продукт, след което изсушете старателно.

Важно! Не използвайте почистващи препарати или абразивни прахове, тъй като те ще повредят покритието. Ежедневна употреба

Замразяване на прясна храна

- Фризерното отделение е подходящо за замразяване на прясна храна и съхраняване на замразена и дълбоко замразена храна за дълго време.
- Поставете прясната храна, която ще бъде замразена, в долното отделение.
- Максималното количество храна, което може да бъде замразено за 24 часа, е посочено на табелата за оценка.
- Процесът на замразяване продължава 24 часа: през този период не добавяйте друга храна, която да бъде замразена.

Съхранение на замразена храна

При първо пускане или след период извън употреба. Преди да поставите продукта в отделението, оставете уреда да работи поне 2 часа при по-високите настройки.

Важно! В случай на случайно размразяване, например захранването е изключено за по-дълго от стойността, показана в таблицата на техническите характеристики в „време на повишаване“, размразената храна трябва да се консумира бързо или да се приготи незабавно и след това да се замрази отново (след приготвяне) ,

Размразяване

Дълбоко замразената или замразена храна, преди да бъде използвана, може да се размрази във фризерното отделение или при стайна температура, в зависимост от наличното време за тази операция. Малки парченца могат дори да бъдат приготвени все още замразени, директно от фризера. В този случай готвенето ще отнеме повече време.

Полезни съвети

Съвети за замразяване

За да ви помогнем да се възползвате максимално от процеса на замразяване, ето няколко важни съвета:

- максималното количество храна, която може да бъде замразена за 24 часа, е показано на табелата за оценка;
- процесът на замразяване отнема 24 часа. През този период не трябва да се добавя допълнителна храна, която да се замразява; Freeзамразете само висококачествени, пресни и добре почистени хранителни продукти;
- пригответе храна на малки порции, за да може тя бързо и напълно да се замразява и за да може впоследствие да се размрази само необходимото количество;
- увийте храната в алуминиево фолио или полиетилен и се уверете, че опаковките са херметични;
- не позволявайте прясна, замразена храна да докосва вече замразена храна, като по този начин избягвате повишаване на температурата на последната;
- постните храни се съхраняват по-добре и по-дълго от мазните; солта намалява срока на съхранение на храната;
- водните ледове, ако се консумират веднага след изваждане от камерата за замразяване, могат да доведат до изгаряне на кожата;
- препоръчително е да се посочи датата на замръзване на всеки отделен пакет, за да можете да го извадите от отделението за замразяване, евентуално може да доведе до изгаряне на кожата;
- препоръчително е да се покаже датата на замразяване на всеки отделен пакет, за да можете да запазите раздела за времето за съхранение.

Съвети за съхранение на замразена храна

За да постигнете най-доброто представяне от този уред, трябва да:

Ежедневна употреба

уверете се, че замразените в търговската мрежа храни са съхранявани по подходящ начин от търговеца на дребно; бъдете сигурни, че замразените хранителни продукти се прехвърлят от хранилището във фризера за възможно най-кратко време; не отваряйте вратата често или не я оставяйте отворена по-дълго, отколкото е абсолютно необходимо.

След размразяване храната се разваля бързо и не може да бъде замразена отново.

Не превишавайте срока на съхранение, посочен от производството на храни.

Съвети за охлаждане на прясна храна

За да постигнете най-доброто представяне:

- Не съхранявайте топла храна или изпаряващи се течности в хладилника
- Покрийте или увийте храната, особено ако тя има силен аромат

Съвети за охлаждане

Полезни съвети:

- Направете (всички видове): увийте в полиетиленови торбички и поставете върху стъклени рафтове над чекмеджето за зеленчуци. За безопасност съхранявайте по този начин най-много един или два дни.
- Готвени храни, студени ястия и т.н. те трябва да бъдат покрити и да бъдат поставени на всеки рафт.
- Плодове и зеленчуци: те трябва да бъдат добре почистени и поставени в специалното (ите) чекмедже (и).
- масло и сирене: те трябва да се поставят в специални херметични контейнери или да бъдат увити в алуминиево фолио или полиетиленови торбички, за да се изключи възможно най-много въздух.
- Бутилка с мляко: те трябва да имат капачка и трябва да се съхраняват на балконите на вратата.
- Банани, картофи, лук и чесън, ако не са опаковани, не трябва да се съхраняват в хладилника.

Контрол на температурата във Fresh зона.



Почистване

По хигиенни причини интериорът на уреда, включително интериорните аксесоари, трябва да се почиства редовно.



Внимание! Уредът може да не е свързан към електрическата мрежа по време на почистване.

Опасност от токов удар! Преди почистване изключете уреда и извадете щепсела от електрическата мрежа или изключете от прекъсвача или предпазителя. Никога не почиствайте уреда с прахосмукачка. Влагата може да се натрупва в електрически компоненти, опасност от токов удар! Горещите пари могат да доведат до повреда на пластмасовите части. Уредът трябва да е сух, преди да бъде върнат отново в експлоатация.

Важно! Етеричните масла и органичните разтворители могат да атакуват пластмасови части, напр. лимонов сок или сокът образуват портокалова кора, маслена киселина, почистващ препарат, който съдържа оцетна киселина.

- Не позволявайте такива вещества да влизат в контакт с частите на уреда.
- Не използвайте абразивни почистващи препарати

Ежедневна употреба

- Извадете храната от фризера. Съхранявайте ги на хладно място, добре покрити.
- Изключете уреда и извадете щепсела от електрическата мрежа или изключете или изключете прекъсвача на предпазителя.
- Почистете уреда и интериорните аксесоари с кърпа и хладка вода. След почистване избършете с прясна вода и разтрийте на сухо.
- След като всичко е сухо, уредът се връща в експлоатация.

Почистване

Интериорните повърхности на уреда, включително аксесоарите, трябва редовно да се измиват.



Внимание! Уредът не трябва да е включен към електрическата мрежа по време на почистване. Опасност от токов удар! Преди да пристъпите към почистване на уреда, изключете го и извадете щепсела от контакта, или изключете активирайте автоматичния прекъсвач или предпазителя. Никога не почиствайте уреда с парочистачка. Влагата може да се отложи по електронните компоненти и ще породи опасност от токов удар! Горещи изпарения могат да повредят пластмасовите части. Уредът трябва да бъде сух, преди да се включи отново в електрозахранването.

Важно! Етерични масла и органични разтворители могат да атакуват пластмасовите части, напр. лимонов сок или сок от портокалови кори, маслена киселина, почистващи препарати, съдържащи оцетна киселина.

- Не допускайте такива вещества да влизат в контакт с части на уреда.
- Не използвайте абразивни почистващи препарати.
- Изваждайте храната от фризера. Съхранявайте я на хладно място, добре покрити.
- Изключете уреда и извадете щепсела от контакта, или изключете активирайте автоматичния прекъсвач или предпазителя.
- Почистете уреда и интериорните аксесоари с кърпа и хладка вода. След почистване избършете с прясна вода и подсушете добре.
- Когато всичко е сухо, можете да включите уреда.

Ежедневна употреба

Отстраняване на неизправности

⚠ Внимание! Преди да изпълнявате действия по отстраняване на неизправности, изключете захранването. Само квалифициран електротехник или компетентно лице могат да ремонтират уреда за отстраняване на проблеми, които не са посочени в това упътване. Важно! По време на нормална работа хладилникът ще издава звуци/шум (които се дължат на работата на компресора и циркулацията на хладилния агент).

Проблем	Възможна причина	Решение
Уредът не работи	Щепселът на захранващия кабел въобще не е включен в контакт или не е включен добре	Включете щепсела добре.
	Предпазителът е изгорял или е повреден.	Проверете предпазителя, сменете го, ако е необходимо.
	Контактът е повреден.	Неизправностите в мрежата трябва да бъдат отстранявани от електротехник.
Уредът замразява или охлажда твърде много	Температурата, която е зададена, е твърде ниска или уредът работи в Супер режим.	Временно завъртете терморегулатора на настройка с по-висока температура.
Хранителните продукти не се замразяват достатъчно	Температурата не е правилно настроена.	Погледнете в раздела "Настройка на температурата".
	Вратата е била отворена продължително време.	Отваряйте вратата толкова дълго, колкото е необходимо.
	В последните 24 часа е поставено голямо количество топла храна в уреда.	Временно завъртете терморегулатора на настройка с по-ниска температура.
	Уредът се намира в близост до източник на топлина.	Погледнете в раздела за избор на място за инсталиране.
По уплътнението на вратата има натрупан много лед.	Уплътнението на вратата не може да я уплътни добре.	Внимателно затоплете течащите части на уплътнението на вратата със сешоар (със студена струя въздух). В същото време оформяйте затопленото уплътнение на вратата с ръка, така че да застане правилно на мястото си.
Необичайни шумове	Уредът не е нивелиран.	Регулирайте крачетата.
	Уредът се допира до стената или други предмети.	Леко отместете уреда.
	Компонент, например тръба на гърба на уреда, се докосва до друга част от уреда или до стена.	Ако е необходимо, внимателно огънете компонента от мястото му, така че да се отмести.
Вода на пода	Отворът за изтичане на вода е запушен.	Вижте раздела "Почистване и обслужване".

Ежедневна употреба

Ако проблемът се повтори, свържете се със сервизен център.

Тази информация е необходима, за да ви помогне бързо и правилно. Запишете необходимата информация тук, вижте табелката с номиналните параметри.

ВАЖНО:

Този уред не е предназначен за използване от лица (включително деца) с ограничени физически, сетивни или умствени способности, или с недостатъчен опит и познания, освен ако те са наблюдавани или инструктирани относно използването на уреда от лице, отговорно за тяхната безопасност!

Децата трябва да бъдат наблюдавани да не играят с уреда!



„ИЗХВЪРЛЯНЕТО НА ОТПАДНИТЕ ЕЛЕКТРИЧЕСКИ И ЕЛЕКТРОННИ УРЕДИ ОТ КРАЙНИ ПОТРЕБИТЕЛИ В ЕВРОПЕЙСКИЯ СЪЮЗ“

Символът върху продукта или опаковката сочи, че този продукт не може да се изхвърля заедно с битовите отпадъци. Потребителят е отговорен за изхвърлянето на такъв вид отпадъци, особено електрически и електронни, в определената за това „точка“. Разделното събиране и рециклиране на това оборудване допринася за опазване на природните ресурси и гарантира рециклирането им с оглед опазване на околната среда и здравето. За подробна информация относно реда на изхвърляне на електрически и електронни отпадъци следва да се обърнете към местните компетентни власти, службата за събиране на битови отпадъци или фирмата, от която сте закупили продукта.



Този продукт е разработен и отговаря на всички европейски директиви и изисквания.



ЕКОПАК

Резервните части ще бъдат налични за период от 7 или до 10 години, в съответствие със специфичните изисквания на регламент 2019/2020.

 ENERG 	
ТЪРГОВСКА МАРКА	ИДЕНТИФИКАТОР НА МОДЕЛ*
	Информацията за модела, съхранявана в базата данни на продукта, може да бъде получена като сканирате QR кода от енергийния етикет на продукта, или като въведете следния уебсайт и потърсите идентификатора на вашия модел (*), намиращ се на енергийния етикет. https://eprel.ec.europa.eu
Информация, относно минималния срок на гаранцията, предлагана от вносителя, както и контакти на сервизния център, е налична в гаранционната карта на уреда или онлайн на: https://densi.bg/services	

User Instruction

Combi Fridge Freezer No-Frost

MRF30FB -P5CB2EH

Content	
1. Safety Information	Page 1~9
2. Overview	Page 10
3. Installation	Page 11~13
4. Daily Use	Page 14~21

In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety.

For the safety of life and property keep the precautions of these user's instructions as the manufacturer is not responsible for damages caused by omission.

Children and vulnerable people safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children aged from 3 to 8 years are allowed to load and unload this appliance.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.
- Keep all packaging well away from children. There is risk of suffocation.

- If you are discarding the appliance pull the plug out of the socket, cut the connection cable (as close to the appliance as you can) and remove the door to prevent playing children to suffer electric shock or to close themselves into it.
- If this appliance featuring magnetic door seals is to replace an older appliance having a spring lock (latch) on the door or lid, be sure to make that spring lock unusable before you discard the old appliance. This will prevent it from becoming a death trap for a child.

General safety

 **WARNING!** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

 **WARNING!** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

 **WARNING!** Do not damage the refrigerant circuit.

 **WARNING!** Do not use other electrical appliances (such as ice cream makers) inside of refrigerating appliances, unless they are approved for this purpose by the manufacture.

 **WARNING!** Do not touch the light bulb if it has been on for a long period of time because it could be very hot.¹⁾

¹⁾ If there is a light in the compartment.

 **WARNING!** When positioning the appliance, ensure the supply cord is not trapped or damaged.

 **WARNING!** Do not locate multiple portable socket-outlets or portable power suppliers at the rear of the appliance.

- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- The refrigerant isobutane (R-600a) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, which is nevertheless flammable.
- During transportation and installation of the appliance, be certain that none of the components of the refrigerant circuit become damaged.
 - avoid open flames and sources of ignition
 - thoroughly ventilate the room in which the appliance is situated
- It is dangerous to alter the specifications or modify this product in any way. Any damage to the cord may cause a short circuit, fire and/or electric shock.
- This appliance is intended to be used in household and similar applications such as
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses and by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - catering and similar non-retail applications.

 **WARNING!** Any electrical components (plug, power cord, compressor and etc.) must be replaced by a certified service agent or qualified service personnel.

 **WARNING!** The light bulb supplied with this appliance is a “special use lamp bulb” usable only with the appliance supplied. This “special use lamp” is not usable for domestic lighting.¹⁾

- Power cord must not be lengthened.
- Make sure that the power plug is not squashed or damaged by the back of the appliance. A squashed or damaged power plug may overheat and cause a fire.
- Make sure that you can come to the mains plug of the appliance.
- Do not pull the mains cable.
- If the power plug socket is loose, do not insert the power plug. There is a risk of electric shock or fire.
- You must not operate the appliance without the lamp.
- This appliance is heavy. Care should be taken when moving it.
- Do not remove nor touch items from the freezer compartment if you hands are damp/wet, as this could cause skin abrasions or frost/freezer burns.
- Avoid prolonged exposure of the appliance to direct sunlight.

Daily use

- Do not put hot on the plastic parts in the appliance.
- Do not place food products directly against the rear wall.

¹⁾ If there is a light in the compartment.

- Frozen food must not be re-frozen once it has been thawed out.¹⁾
- Store pre-packed frozen food in accordance with the frozen food manufacturer's instructions.¹⁾
- Appliance's manufacturer's storage recommendations should be strictly adhered to. Refer to relevant instructions.
- Do not place carbonated or fizzy drinks in the freezer compartment as it creates pressure on the container, which may cause it to explode, resulting in damage to the appliance.¹⁾
- Ice lollies can cause frost burns if consumed straight from the appliance.¹⁾
- To avoid contamination of food, please respect the following instructions
- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
- Clean water tanks if they have not been used for 48h; flush the water system connected to a water supply if water has not been drawn for 5 days.
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- Two-star frozen-food compartments (if they are presented in the appliance) are suitable for storing pre-frozen food, storing or making ice-cream and making ice cubes.

1) If there is a freezer compartment.

2) If there is a fresh-food storage compartment.

- One-, two- and three -star compartments (if they are presented in the appliance) are not suitable for the freezing of fresh food.
- If the appliance is left empty for long periods, switch off, defrost, clean, dry and leave the door open to prevent mould developing within the appliance.

Care and cleaning

- Before maintenance, switch off the appliance and disconnect the mains plug from the mains socket.
- Do not clean the appliance with metal objects.
- Do not use sharp objects to remove frost from the appliance. Use a plastic scraper.¹⁾
- Regularly examine the drain in the refrigerator for defrosted water. If necessary, clean the drain.
If the drain is blocked, water will collect in the bottom of the appliance.²⁾

Installation

Important! For electrical connection carefully follow the instructions given in specific paragraphs.

- Unpack the appliance and check if there are damages on it. Do not connect the appliance if it is damaged. Report possible damages immediately to the place you bought it. In that case retain packing.

1) If there is a freezer compartment.

2) If there is a fresh-food storage compartment.

- It is advisable to wait at least four hours before connecting the appliance to allow the oil to flow back in the compressor.
- Adequate air circulation should be around the appliance, lacking this leads to overheating. To achieve sufficient ventilation follow the instructions relevant to installation.
- Wherever possible the spacers of the product should be against a wall to avoid touching or catching warm parts (compressor, con-denser) to prevent possible burn.
- The appliance must not be located close to radiators or cookers.
- Make sure that the mains plug is accessible after the installation of the appliance.

Service

- Any electrical work required to do the servicing of the appliance should be carried out by a qualified electrician or competent person.
- This product must be serviced by an authorized Service Center, and only genuine spare parts must be used.

Energy saving

- Don't put hot food in the appliance;
- Don't pack food close together as this prevents air circulating;
- Make sure food don't touch the back of the compartment(s);

- If electricity goes off, don't open the door(s);
- Don't open the door(s) frequently;
- Don't keep the door(s) open for too long time;
- Don't set the thermostat on exceeding cold temperatures;
- All accessories, such as drawers, shelves balconies, should be kept there for lower energy consumption.

Environment Protection

 This appliance does not contain gasses which could damage the ozone layer, in either its refrigerant circuit or insulation materials. The appliance shall not be discarded together with the urban refuse and rubbish. The insulation foam contains flammable gases: the appliance shall be disposed according to the appliance regulations to obtain from your local authorities. Avoid damaging the cooling unit, especially the heat exchanger. The materials used on this appliance marked by the symbol  are recyclable.

 The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health,

which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

Packaging materials

The materials with the symbol are recyclable. Dispose the packaging in a suitable collection containers to recycle it.

Disposal of the appliance

1. Disconnect the mains plug from the mains socket.
2. Cut off the mains cable and discard it.




WARNING! During using, service and disposal the appliance, please pay attention to symbol similar as left side, which is located on rear of appliance (rear panel or compressor) and with yellow or orange color.

It's risk of fire warning symbol. There are flammable materials in refrigerant pipes and compressor.

Please be far away fire source during using, service and disposal.

Overview


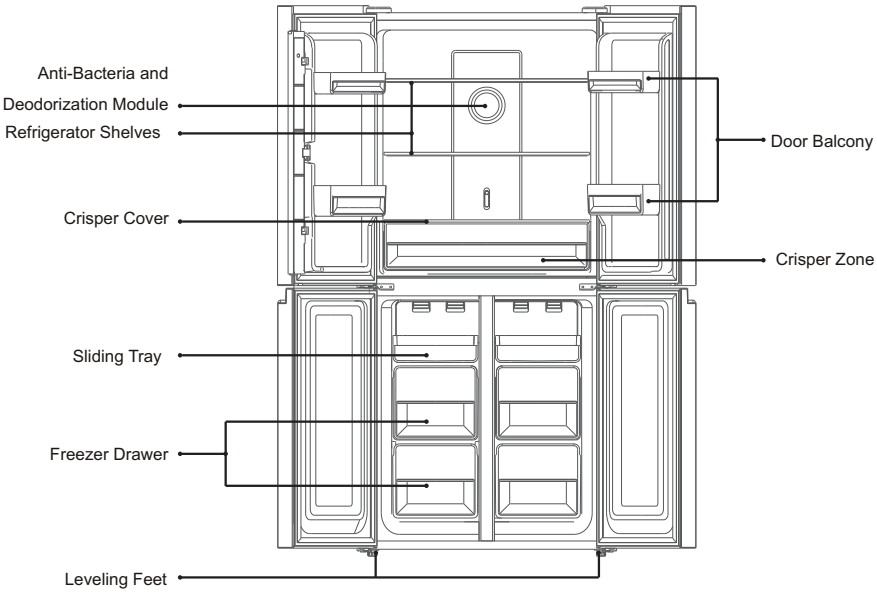


This illustration is only for hinting, the detail please check your appliance.

Installation

Space Requirement



- Keep enough space of door open.

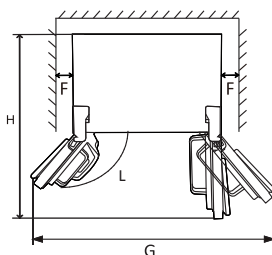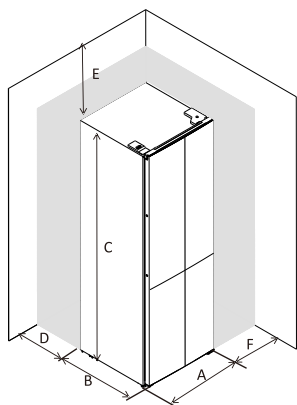

A	790
B	620
C	1800
D	min=50
E	min=50
F	min=50
G	1580
H	1410
L	135°

Levelling the unit

To do this adjust the two levelling feet at front of the unit.

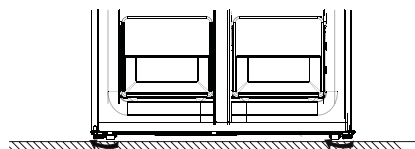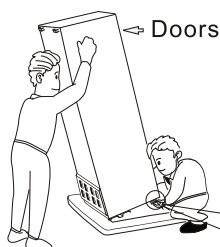

- Leveling and anchor the refrigerator by adjust the feet.
- Clockwise rotate feet to heighten them by hand.
- Anticlockwise rotate feet to lower them by hand.


Level doors

After transportation or door balconies are loaded by food or beverage, upper two doors may not be aligned. There are 3 C type washers which are used to adjust doors. Please follow below process to level doors.



1. Before check alignment of doors, please make sure appliance stand levelly .
2. If top of upper two doors looks not in a line, please slightly lift lower door and insert a pieces of C type washer by a clip between bottom of door and middle hinge.

Installation

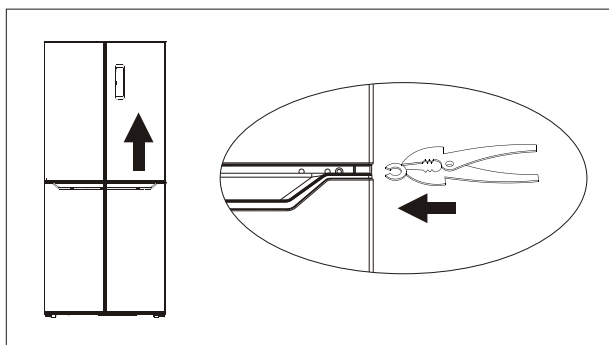


 **Warning!** Please be careful to avoid fingers are clipped by door. Please use tool.


 **Warning!** Please keep C type washers far away children to avoid them are swallowed by children. They are small parts.

Rubber blocks


There is one rubber block on each door. They function as spring to relieve impact when door closes .



Please not pull the rubber blocks. If they absent from the doors, please take one from accessory bag and insert it to the hole of door.

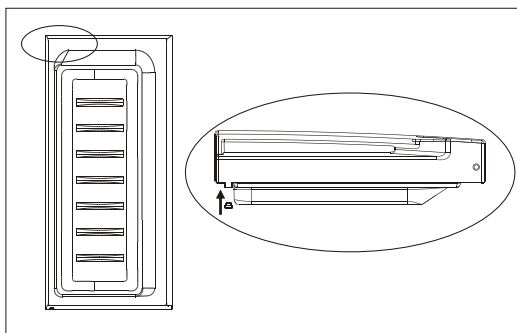

Installation

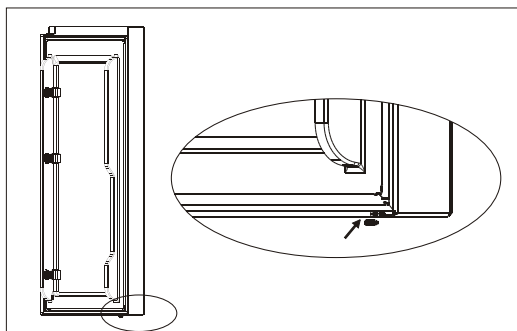

Warning! Please keep rubber blocks far away from children to avoid them being swallowed by children. They are small parts.

Positioning

Install this appliance at a location where the ambient temperature corresponds to the climate class indicated on the rating plate of the appliance:

for refrigerating appliances with climate class:

- extended temperature: this refrigerating appliance is intended to be used at ambient temperatures ranging from 10 °C to 32 °C; (SN)
- temperature: this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 32 °C; (N)
- subtropical: this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 38 °C; (ST)
- tropical: this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 43 °C; (T)

Location

The appliance should be installed well away from sources of heat such as radiators, boilers, direct sunlight etc. Ensure that air can circulate freely around the back of the cabinet. To ensure best performance, if the appliance is positioned below an overhanging wall unit, the minimum distance between the top of the cabinet and the wall unit must be at least 50 mm. Ideally, however, the appliance should not be positioned below overhanging wall units. Accurate leveling is ensured by one or more adjustable feet at the base of the cabinet.

This refrigerating appliance is not intended to be used as a built-in appliance;

Warning! It must be possible to disconnect the appliance from the mains power supply; the plug must therefore be easily accessible after installation.

Electrical connection


Before plugging in, ensure that the voltage and frequency shown on the rating plate correspond to your domestic power supply. The appliance must be earthed. The power supply cable plug is provided with a contact for this purpose. If the domestic power supply socket is not earthed, connect the appliance to a separate earth in compliance with current regulations, consulting a qualified electrician.

The manufacturer declines all responsibility if the above safety precautions are not observed.

This appliance complies with the E.E.C. Directives.

Daily Use

Using the Control Panel

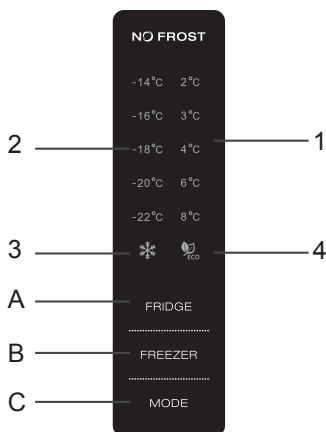

1.1 BUTTON OPERATION

- A.Temperature Control of Fridge Compartment
- B.Temperature Control of Freezer Compartment
- C.Mode

1.2 LED DISPLAY

- 1.Temperature of Fridge Compartment
- 2.Temperature of Freezer Compartment
- 3.Super Mode
- 4.ECO Mode

2.0 OPERATION CONDITION

The control panel will be 100% lit up for 3 seconds after power on, and then show previous setting temperature or running mode before power off. After that, you can adjust temperature of freezer or fridge compartments or running mode.

2.1 DISPLAY

2.1.1The panel will be lit up for 2 minutes once the door of fridge compartment is opened.

2.1.2 The panel will be lit up by any button operation whereas the light would be out 2 minutes after the last operation.

2.1.3 Display during normal operation

Temperature Display of the Fridge Compartment: Indicating the temperature of the current setting.

Temperature Display of the Freezer Compartment: Indicating the temperature of the current setting.

Daily Use

3.0 BUTTONS

3.1 FRIDGE

Press FRIDGE button to adjust temperature of fridge compartment in user mode or SUPER mode. Touch the button consecutively, the temperature will change in a circle of 2°C, 3°C, 4°C, 6°C, 8°C, the selection will be confirmed after 5 seconds of flash of fridge temperature icons. In ECO mode, this button is not react.

3.2 FREEZER

Press FREEZER button to adjust temperature of freezer compartment in user mode. Touch the button consecutively, the temperature will change in a circle of -14°C, -16°C, -18°C, -20°C, -22°C, the selection will be confirmed after 5 seconds of flash of freezer temperature icons. In ECO and SUPER modes, this button is not react.

3.3 MODE

Press MODE button to select running mode: ECO, SUPER and user mode. Once select ECO mode, ECO icon will be lit and other icons will be switched off. Once select SUPER mode, SUPER icon and Fridge temperature icon will be lit, other icons will be switch off. Once select user mode, you can adjust temperature of fridge and freezer compartments by press FRIDGE and FREEZER button.

4.0 ECO MODE

Press MODE button to select ECO mode, ECO icon will flash 5 seconds and then ECO mode is confirmed. In ECO mode, the appliance will automatically set temperature of freezer and fridge compartments according to ambient temperature. Press MODE button to select other running mode to exit ECO mode.

5.0 Super mode

Press MODE button to select Super mode. And it will be confirmed after 5 seconds of flash of Super icon.

In Super mode, "FREEZER" button will not response any press.

To exit Super mode,

- Adjust mode by MODE button,
- Or after 50 hours of Super mode, the refrigerator will automatically stop it and enter to previous setting.

Helpful hint:

If you plan to freeze a large number food in one time, please set Super mode 24 hours ahead.

Warning:

In Super mode, the refrigerator will work hard. So the noise of refrigerator will be slightly higher than normal running.

6.0 Door Open Alarm

If fridge (upper) door keeps open for 90 seconds, periodical alarm will be arisen until the door is closed.

Daily Use

First use

Cleaning the interior

Before using the appliance for the first time, wash the interior and all internal accessories with lukewarm water and some neutral soap so as to remove the typical smell of a brand new product, then dry thoroughly.

Important! Do not use detergents or abrasive powders, as these will damage the finish.

Daily use

Position different food in different compartments according to be below table

Refrigerator compartments	Type of food
Door or balconies of fridge compartment	• Foods with natural preservatives, such as jams,juices, drinks, condiments. • Do not store perishable foods.
Crisper drawer (salad drawer)	• Fruits, herbs and vegetables should be placed separately in the crisper bin. • Do not store bananas, onions, potatoes, garlic in the refrigerator.
Fridge shelf – middle	• Dairy products, eggs
Fridge shelf – top	• Foods that do not need cooking, such as ready-to-eat foods, deli meats, leftovers.
Freezer drawer(s)/shelf	• Foods for long-term storage. • Bottom drawer/shelf for raw meat, poultry, fish. • Middle drawer/shelf for frozen vegetables, chips. • Top drawer/shelf for ice cream, frozen fruit, frozen baked goods.

Daily Use

Temperature setting recommendation

Temperature Setting Recommendation		
Environment Temperature	Temperature Setting	
Summer (Above 38°C)	NO FROST -14°C 2°C -16°C 3°C -18°C 4°C -20°C 6°C -22°C 8°C   FRIDGE FREEZER MODE	Fridge set on 4°C
		Freezer set on -18°C
Normal		Fridge set on 4°C
		Freezer set on -18°C
Winter (Below 16°C)		Fridge set on 4°C
		Freezer set on -18°C

- Information above give users recommendation of temperature setting.

Impact on Food Storage

- Under Recommended setting, the best storage time of fridge is no more than 3 days.
- Under Recommended setting, the best storage time of freezer is no more than 1 month.
- The best storage time may reduce under other settings.

Daily Use

Fresh Zone Temperature Control

- Temperature of the fresh can be adjusted according to the type of storage food.
- Push the knob upward from the bottom, temperature in the fresh zone will be gradually decreased.
- When the knob is placed at the "CRISPER" position, the fresh zone can be functioned as a crisper zone and maintain the appropriate temperature and humidity for fruits and vegetable.
- When the knob is placed at the top position, it is suitable for short-term storage of fish or other fresh food. The food will keep fresh but not frozen which makes it the best choice for storing fresh food.
- Tips: When the knob is placed at the top position, it is recommended to set the refrigerator temperature below 4°C . and preserved lead-time no more than 3 days , in order to keep the best freshness.



Freezing fresh food

- The freezer compartment is suitable for freezing fresh food and storing frozen and deep-frozen food for a long time.
- Place the fresh food to be frozen in the freezer compartment.
- The maximum amount of food that can be frozen in 24 hours is specified on the rating plate.
- The freezing process lasts 24 hours: during this period do not add other food to be frozen.

Storing frozen food

When first starting-up or after a period out of use, before putting the product in the compartment let the appliance run at least 2 hours on the higher settings.

Important! In the event of accidental defrosting, for example the power has been off for longer than the value shown in the technical characteristics chart under "rising time", the defrosted food must be consumed quickly or cooked immediately and then re-frozen (after cooked).

Thawing

Deep-frozen or frozen food, prior to be used, can be thawed in the fridge compartment or at room temperature, depending on the time available for this operation.

Small pieces may even be cooked still frozen, directly from the freezer. In this case, cooking will take longer.

Ice-cube


This appliance may be equipped with one or more ice-cube to produce ice.

Daily Use

Accessories


Movable shelves

The walls of the refrigerator are equipped with a series of runners so that the shelves can be positioned as desired.

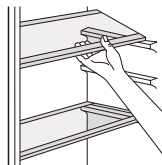

Positioning the door balconies

To permit storage of food packages of various sizes, the door balconies can be placed at different heights. To make these adjustments proceed as follows: gradually pull the balcony in the direction of the arrows until it comes free, then reposition as required.

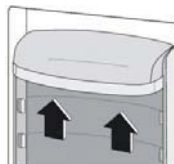

Helpful hints and tips

To help you make the most of the freezing process, here are some important hints:

- the maximum quantity of food which can be frozen in 24 hrs. is shown on the rating plate;
- the freezing process takes 24 hours. No further food to be frozen should be added during this period;
- only freeze top quality, fresh and thoroughly cleaned, foodstuffs;
- prepare food in small portions to enable it to be rapidly and completely frozen and to make it possible subsequently to thaw only the quantity required;
- wrap up the food in aluminium foil or polythene and make sure that the packages are airtight;
- do not allow fresh, unfrozen food to touch food which is already frozen, thus avoiding a rise in temperature of the latter;
- lean foods store better and longer than fatty ones; salt reduces the storage life of food;
- water ices, if consumed immediately after removal from the freezer compartment, can possibly cause the skin to be freeze burnt;
- it is advisable to show the freezing in date on each individual pack to enable you removal from the freezer compartment, can possibly cause the skin to be freeze burnt;
- it is advisable to show the freezing in date on each individual pack to enable you to keep tab of the storage time.

Hints for storage of frozen food

To obtain the best performance from this appliance, you should:

- make sure that the commercially frozen foodstuffs were adequately stored by the retailer;
- be sure that frozen foodstuffs are transferred from the food store to the freezer in the shortest possible time;
- not open the door frequently or leave it open longer than absolutely necessary.
- once defrosted, food deteriorates rapidly and cannot be re-frozen;
- do not exceed the storage period indicated by the food manufacture.

Hints for fresh food refrigeration

To obtain the best performance:

- Do not store warm food or evaporating liquids in the refrigerator
- Do cover or wrap the food, particularly if it has a strong flavour
- Make (all types): wrap in polythene bags and place on the glass shelves above the vegetable drawer.
- For safety, store in this way only one or two days at the most.
- Cooked foods, cold dishes, etc...: these should be covered and may be placed on any shelf.
- Fruit and vegetables: these should be thoroughly cleaned and placed in the special drawer(s) provided.
- butter and cheese: these should be placed in special airtight containers or wrapped in aluminum foil or polythene bags to exclude as much air as possible.
- Milk bottle: these should have a cap and should be stored in the balconies on the door.
- Bananas, potatoes, onions and garlic, if not packed, must not be kept in the fridge.

Daily Use

Cleaning

For hygienic reasons the appliance interior, including interior accessories, should be cleaned regularly.



Caution! The appliance may not be connected to the mains during cleaning. Danger of electrical shock! Before cleaning switch the appliance off and remove the plug from the mains, or switch off or turn out the circuit breaker or fuse. Never clean the appliance with a steam cleaner. Moisture could accumulate in electrical components, danger of electrical shock! Hot vapors can lead to the damage of plastic parts. The appliance must be dry before it is placed back into service.

Important! Ethereal oils and organic solvents can attack plastic parts, e.g. lemon juice or the juice from orange peel, butyric acid, cleanser that contain acetic acid.

- Do not allow such substances to come into contact the appliance parts.
- Do not use any abrasive cleaners
- Remove the food from the freezer. Store them in a cool place, well covered.
- Switch the appliance off and remove the plug from the mains, or switch off or turn out the circuit breaker of fuse.
- Clean the appliance and the interior accessories with a cloth and lukewarm water. After cleaning wipe with fresh water and rub dry.
- After everything is dry place appliance back into service.

Defrost Description (No Frost)

It is a total no frost refrigerator-freezer which will be defrosted automatically.

Daily Use

Troubleshooting



Caution! Before troubleshooting, disconnect the power supply. Only a qualified electrician or competent person must do the troubleshooting that is not in this manual.

Important! There are some sounds during normal use (compressor, refrigerant circulation).

Problem	Possible cause	Solution
Appliance does not work	Mains plug is not plugged in or is loose	Insert mains plug.
	Fuse has blown or is defective	Check fuse, replace if necessary.
	Socket is defective	Mains malfunctions are to be corrected by an electrician.
Appliance freezes or cools too much	Temperature is set too cold or the appliance runs at SUPER modes.	Turn the temperature regulator to a warmer setting temporarily.
The food is not frozen enough.	Temperature is not properly adjusted.	Please look in the initial Temperature Setting section.
	Door was open for an extended period.	Open the door only as long as necessary.
	A large quantity of warm food was placed in the appliance within the last 24 hours.	Turn the temperature regulation to a colder setting temporarily.
	The appliance is near a heat source.	Please look in the installation location section.
Heavy build up of frost on the door seal.	Door seal is not air tight.	Carefully warm the leaking sections of the door seal with a hair dryer (on a cool setting). At the same time shape the warmed door seal by hand such that it sits correctly.
Unusual noises	Appliance is not level.	Re-adjust the feet.
	The appliance is touching the wall or other objects.	Move the appliance slightly.
	A component, e.g. a pipe, on the rear of the appliance is touching another part of the appliance or the wall.	If necessary, carefully bend the component out of the way.
Water on the floor	Water drain hole is blocked.	See the Cleaning and Care section.

If the malfunction shows again, contact the Service Center. These data are necessary to help you quickly and correctly. Write the necessary data here, refer to the rating plate.

Spare parts will be available for a period of 7 or up to 10 years, in accordance with the specific requirements of the 2019/2020 regulation.